

AFINIA LABEL[®]

USER MANUAL


SR-100

Longitudinal label slitter

THIS PRODUCT IS CERTIFIED:



1

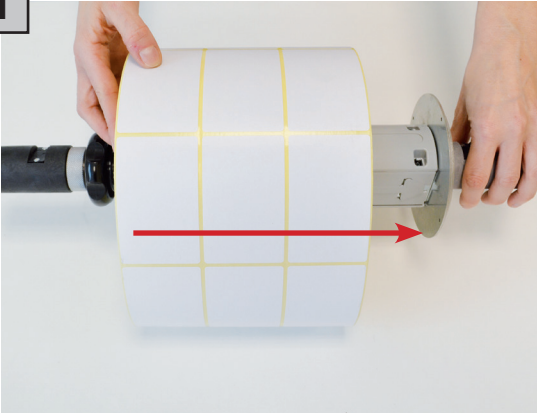

Load the roll on the core holder.
Push until it touches roll guide.




Use this core holder.

2



Tighten the roll and the guide in
place by turning the tension knob.

3

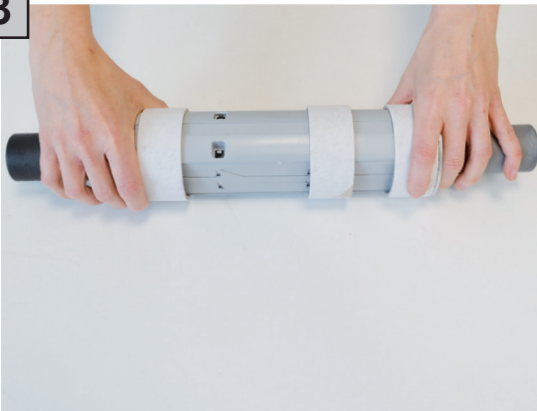


Insert the empty cardboard cores on
the core holder to receive the new
labels roll.




Use this core holder.

4

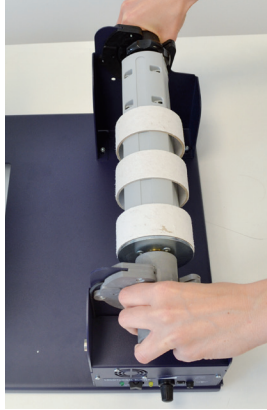


Set the core holders in the supply location. Match the gray handle to gray holder.

5

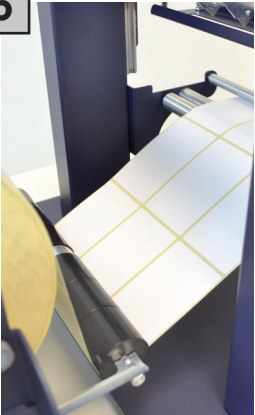


Throw the media under the tension arm and take a look the picture below for the media path in the clutch.

6

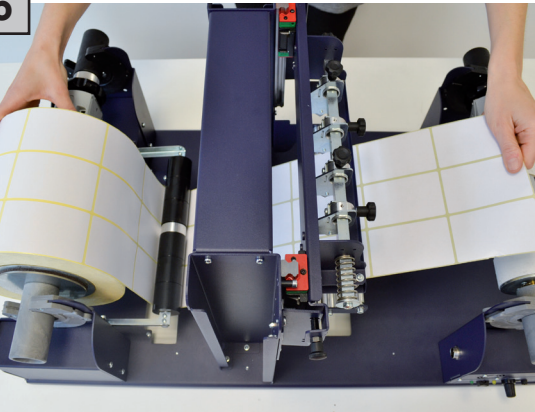


Pull the media for about fifty centimeters.

Paper Path

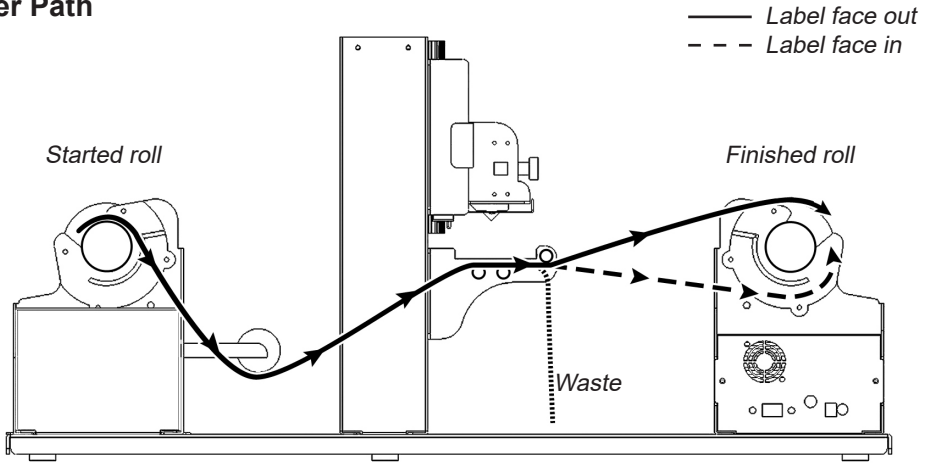


7

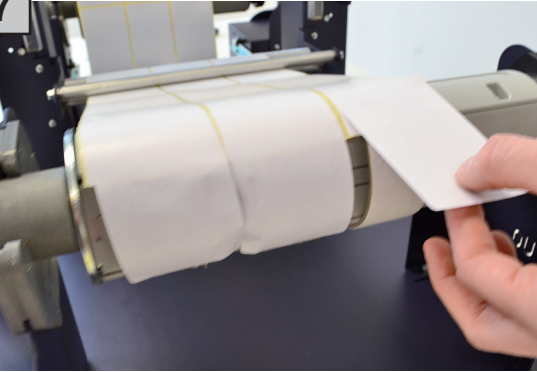

Temporarily attach the label directly to the take-up core holder. This will provide the necessary tension in order to start the slitting process.



8

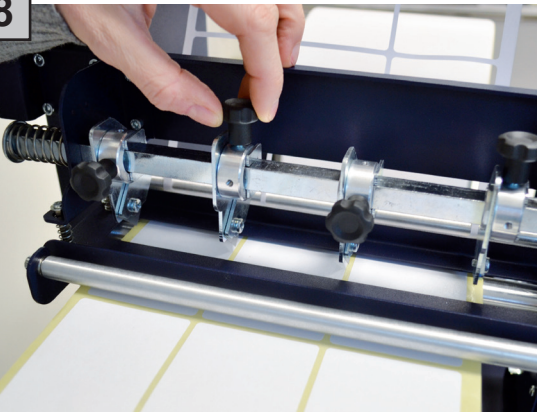

Position the blades in between each column and on either edge if desired. You can alternate the position of the thumb screw from the top to the side to gain easier access.

WARNING!

The slitter blades are exposed and **VERY** sharp when the slitter station is in the "up" position. Use extreme caution!

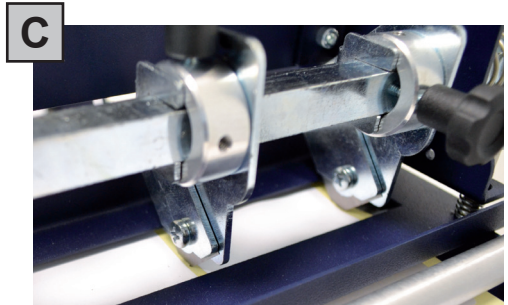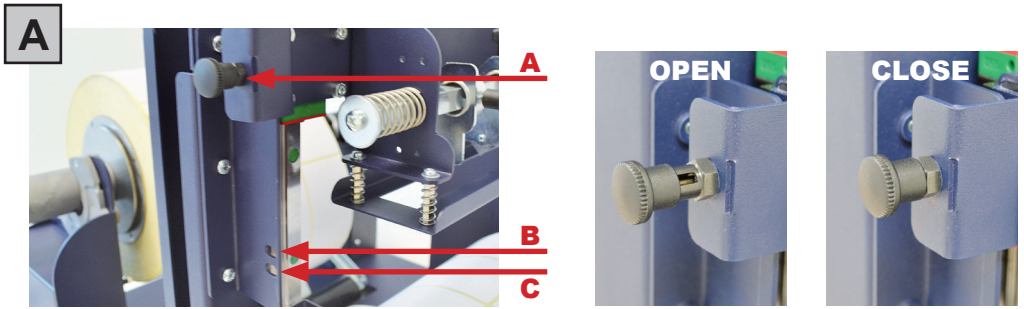


Slitter module has 3 positions:

- Upper position (A), the blades are closed to allow the media loading;
- Middle position (B), align the blades with the edges and the center of the labels, tighten the thumb screw once the blade is in position;
- Lower position (C), the blade cut the media.




The black knobs lock the slitter module in the requested position. Screw the thumb knobs to move the blades to the right or to the left.

9

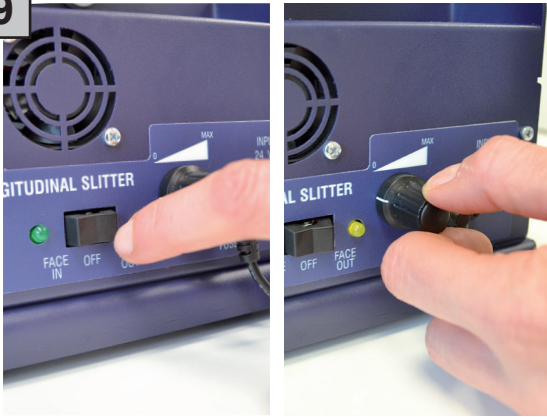

Slowly turn the speed knob. Run the SLITTER until the slit labels reach the bottom of the take-up core holder.

10

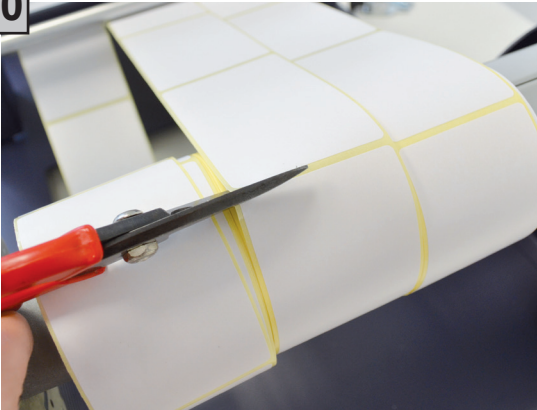

Remove the labels that have wrapped around the take-up core holder.

11



Attach the labels to the core using waste label or tape.

Switch on the SLITTER and slowly turn to increase the speed. When the roll is finished the unit automatically stops.

When the contact on the dancer arm touches the screw on the base, you will also hear an audible tone.

HOW TO ADD OR REMOVE A BLADE HOLDER

1




Keep out the iron slide bar unscrewing the thumb screw.

2



Slide in or out the blade holder. Relocate the slide iron bar in its position and rescrew the thumb screw.

REPLACING SLITTER BLADES

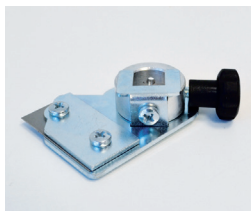


Loosen the two screws holding the blade in place.

Replace the blade.

Fix back the screw to holding the blade in place.

HOW TO ADJUST THE CLUTCH ON UNWINDER

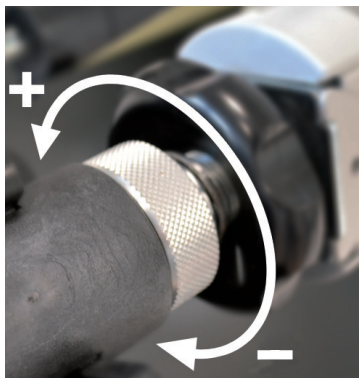


It is possible to adjust the clutch by just screwing or loosening the aluminium handle on it.


+ more clutch

- less clutch

HOW TO USE THE LABEL SLITTER IN-LINE WITH THE PRINTER

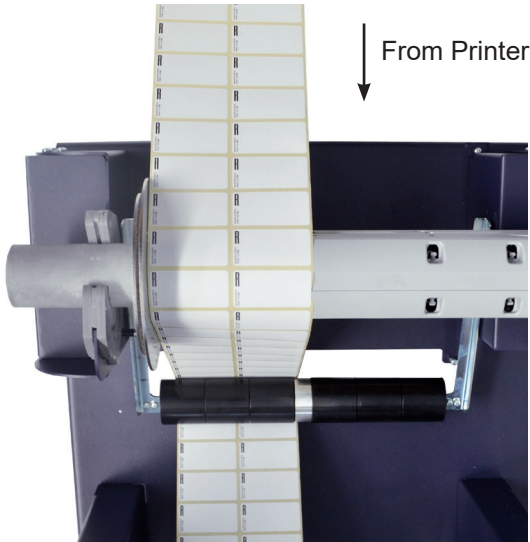

1

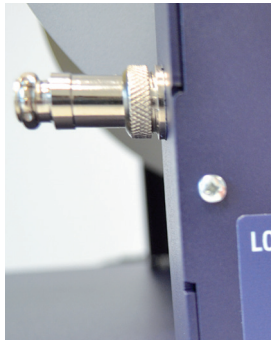

Plug-in the connector to allow the "in-line" feature.

2



Switch on the unit and slowly increase the speed up to the requested working speed.